

# FROMENTAL

## STRAIGHT RUN - HOW TO ORDER


### SELECT YOUR COLOURWAY



### MEASURE YOUR SPACE

Measure your wall width or room perimeter (W) \*  
Divide this number by the panel width of your selected design (P)  
This is the number of panels you need to order (X)

Example:

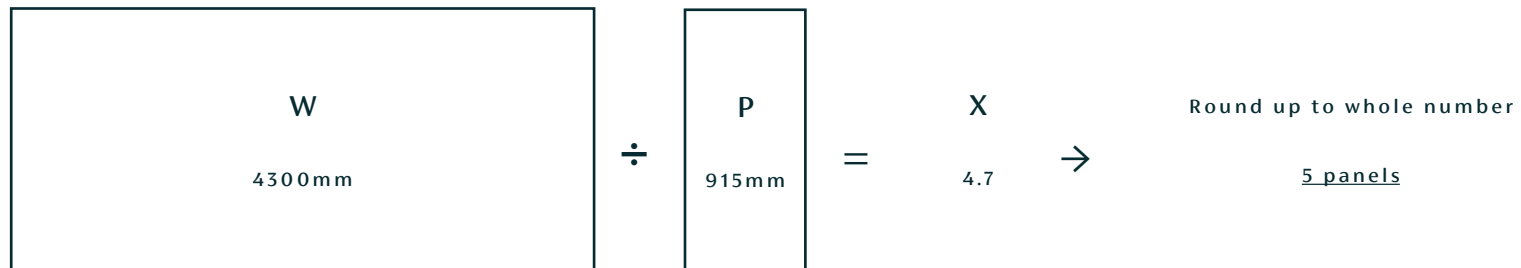

\*we recommend accounting for extra tolerance of at least 100mm



### PLACE YOUR ORDER